



BRING HOME  
**COMFORT & ACCESS**





## COMBINE QUALITY, COMFORT & STYLE

Gain high performance, modern styling and heavy lift capacity with Bruno's top-of-the line Elite straight stairlift. Glide up and down your stairs with a gentle, smooth ride from start to finish. Make your life a little easier with a Bruno Elite featuring high quality and maximum comfort.



The Bruno Elite's Limited Lifetime Warranty gives you the peace of mind to enjoy worry-free access to your entire home long into the future.

## TOP CONSIDERATIONS

- ✓ 181 kg (400 lb) Lift Capacity
- ✓ Limited Lifetime Warranty





## HIGH-PERFORMANCE. EXCEPTIONAL RIDE.

**Easy:** Armrest control operates the stairlift up and down. Two wireless remote controls are also included.

**Safe:** Seat swivels 90° at top of steps and locks in place for safe exit away from stairs. Seat belt and obstruction sensors further ensure safety.

**Comfortable:** Generously sized seat is adjustable in height. Footrest height and space between armrests are also adjustable.

**Space-Saving:** Vertical rail leaves maximum open space on the steps. Fold arms, seat and footrest when not in use to save even more space.

**Sleek:** Covered gear rack on vertical rail gives a slim, clean appearance and reduces exposure to dirt and grease.

**Dependable:** Battery-powered performance, even during a power outage. Stairlift continually charges anywhere it stops on the rail.

**Learn More**  
[bruno.com/aus](https://bruno.com/aus)

## AVAILABLE OPTIONS


Add a manual or power folding rail when you have a doorway at the bottom of the stairs or an installation where the rail may cause an obstruction.

Get an extra-wide seat and/or larger footrest to best match specific body types.

Eliminate the need to lean over with a power folding footrest. Fold the seat, and the footrest will automatically fold, too. Change the standard swivel seat to power, and the seat rotates nearly 90 degrees at the top landing with a push of the control.

Request a four-point harness for additional securement points on the chair.

Multiple seat colour options also available.

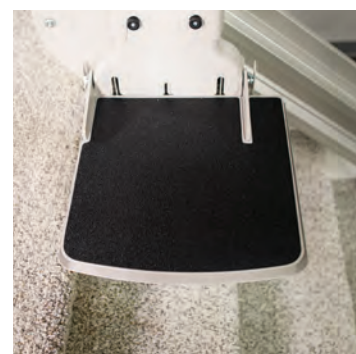

Not all options are shown.



Verified Customer

"My Bruno stairlift allows me to remain in my home and increases my independence. I love it."

Patricia S.





Verified Customer

"Our Bruno stairlift experience was first class. From the initial contact, to the prompt well-done installation to the smooth operation, it was a +++ experience."

Ralph L.







## TECH SPECS

**Lift Capacity:**  
181 kg (400 lb)

**Standard Seat Size:**  
457 mm wide x 381 mm deep (18 in x 15 in)

**Larger Seat Option:**  
572 mm wide x 419 mm deep (22.5 in x 16.5 in)

**Standard Footrest Size:**  
254 mm long x 229 mm wide (10 in x 9 in)

**Larger Footrest Option:**  
305 mm long x 279 mm wide (12 in x 11 in)

**Vertical Rail:**  
Installs within 152 mm (6 in) of the wall

## WARRANTY

**Lifetime Warranty on Major Components** including motor, gearbox, drivetrain and stationary rail system, for the lifetime of the Bruno Stairlift as long as the original purchaser owns the stairlift.

**2 Year Warranty** on all components after date of installation by an Authorised Bruno Dealer.

**30 Days Labour Coverage** after date of installation by an Authorised Bruno Dealer for any manufacturing defect.

## ABOUT BRUNO

**Veteran-Founded | Family-Owned**

Bruno makes stairlifts and vertical platform lifts to help people better access homes, public buildings and businesses, and scooter lifts to assist people in easily transporting their mobility devices.

